

FasCard Admin Site - System Maintenance

Overview

The System Maintenance page is only accessible by users with **Admin** privileges or with **System Maintenance** privileges. This page is used to monitor the status of the [Satellite Access Point](#) and FasCard readers at a specific location.

On this Page

- [Managing the System](#)
- [Managing Location Status](#)
- [Managing Satellite Status](#)
- [Satellite History](#)
- [Managing Machine Status](#)
- [Machine Status History](#)

Managing the System

SYSTEM MAINTENANCE PAGE

Navigating to the System Maintenance page under the System tab will display an alphabetical list of the locations that have been configured for the system. The default view will list up to 6 locations. Once there are more than 6 location types, page numbers will appear, allowing the user to scroll through the machine list. A search box is provided to allow users to easily search for a specific location and clicking **Reset** will clear any search data. Clicking anywhere on a location will display the list of satellites and card readers for that location.



When the filter box is checked, the 'Show Only Offline Devices Across ALL Locations' option will filter satellite and card reader status displays and show only devices that are offline.

Managing Location Status

LOCATION STATUS SECTION

The Location Status Section displays the active status of a particular location. Several items in the Location Listing also function as links to other pages. Below are the columns of the page and their descriptions.

Column Headers	Description
Location	Clicking the location name will load the selected location setup page.
Address	Address of the location
Phone	Phone number of the location
Time Zone	Time zone of the location
Location Group	Clicking the group name will load the location group setup page (if enabled).
Status	Indicates the status of the location.
Machines	Clicking the number in the Machines column will load the machine setup page for the selected location

Account: F0002 ([QA] Equipment Testing) Welcome Lara Daniels [My Settings](#) [Account Setup](#) [Sign Out](#)

[Settings](#) [Setup](#) [Users](#) [System](#) [Reports](#) [Loyalty](#) [Operations](#)

[System Maintenance](#) Alerts

System Maintenance - Location Status

Search for location

Filters: Show Only Offline Devices Across All Locations Time Zone: (UTC-06:00) Central Time (US & Canada)

Location	Address	Phone	Time Zone	Location Group	Status	Machines
Addison Office	302 S Stewart Ave	630-930-5115	Central Standard Time	Addison Office	Active	45

Managing Satellite Status

SATELLITE STATUS SECTION

The satellite status section contains a list of configured satellites for the selected location. Clicking in the empty space between the satellite name and its status will open the below section, Satellite History page.



- Operators utilizing [CCI Cellular Service](#) may note an icon adjacent to the satellite name on the System Maintenance page. Clicking this icon will reveal the uplink name and status.

Column Headers	Description
Satellite	- The given name for the satellite as configured in the location setup page. This also serves as a link to the location setup page and selects the appropriate satellite.
Status	- Current status of the satellite, generated by the server.
MAC Address	- the MAC address for the satellite access point.
VPN Address	- The VPN IP address for the satellite access point.
Public Address	- The public IP address for the satellite access point.
Satware Ver	The satellite software version currently running.
OS/Machine	Hardware and software version of the satellite access point.
Readers	This column displays the number of readers connected to the satellite as well as the total number of readers (e.g. 10/50).
CPU MEM	Current CPU and memory usage of the satellite access point.

Satellite Status for Addison Office

Satellite	Status	MAC Address	VPN Address	Public Address	Satware Ver	OS/Machine	Readers	CPU Mem
LAB	Online (9/18/2019 9:47:08 AM)	4C:5E:0C:B2:EF:CE	10.219.18.155	173.165.43.1	1.20.07	FasSat V3.04.00.U015 RouterOS 6.43.12 (stable) on RB951G-2HnD	15 / 45	21% 4.8MB
▶ LAB2	Online (9/18/2019 9:43:15 AM)	64:D1:54:48:F5:02	10.219.17.89	173.165.43.1	1.20.07	FasSat V3.02.00.U014 RouterOS 6.42.3 (stable) on RB951G-2HnD	5 / 45	18% 4.8MB

Satellite History

Satellite history page logs the following information when a change is detected.



- Satellite history can be displayed by clicking on the row of any listed satellite.
- Satellites can be rebooted by viewing their history and clicking **Reboot FasSat**.

Column Headers	Description
Time	A standard date/time stamp of the record entry
Status	Online/Offline. Offline status indicates that the satellite has lost connection to the server.
VPN Address	This is the assigned internal VPN address and is used by CCI Support staff.
Public Address	This is the external IP address assigned to the satellite and is used by CCI Support staff
Uplink Status	Indicates last known status of Ethernet/LAN connection.
Satware Version	This indicates the satellite access point firmware version
Hardware Reset	Indicates the last time the hardware was reset
VPN Reconnect	Indicates the last time the VPN connection was established

Satellite Status History Details for satellite LAB

Time Zone: (UTC-06:00) Central Time (US & Canada)

 
Refresh

Back

Location: Addison Office (Central Standard Time)
Report display time: 9/28/2019 2:24:47 PM (CDT)

- Online for 2d 04:23:10
- VPN connected for 2d 10:58:30
- Hardware uptime: 19d 04:46:42

Reboot FasSat



Time (CDT)	Status	VPN Address	Public Address	Uplink Status	Satware Ver	Hardware Reset	VPN Reconnect
9/24/2019 10:01:37 AM	Online 2d 04:23:10	10.218.30.70	173.165.43.1	Online	1.20.07		
9/24/2019 10:01:22 AM	Offline 00:00:14						
9/24/2019 3:26:03 AM	Online 06:35:19	10.218.30.70					
9/24/2019 3:25:25 AM	Offline 00:00:37						
9/13/2019 8:52:27 AM	Online 10d 18:32:58	10.219.18.155					
9/13/2019 8:51:47 AM	Offline 00:00:39						
9/11/2019 4:41:13 PM	Online 1d 16:10:34						
9/11/2019 4:41:04 PM	Offline 00:00:08						

Managing Machine Status

MACHINE STATUS SECTION

The machine status section displays a list of all the machines that were configured for the selected location as well as details regarding the current status of the FasCard reader.



- Machine history can be displayed by clicking on the row of any listed machine.
- Card readers can be rebooted by viewing the Machine history and clicking **Reboot Reader**.

Column Headers	Description
Machine #	The machine number that was assigned during machine setup . These numbers also serve as links to the Machines page and will automatically select the relevant machine.
Equipment Type	The equipment type for the configured machine. These also serve as links to the Equipment Setup page and will automatically select the relevant equipment type.
Status	<p>The current status as reported by the satellite access point. If the machine status is currently unknown due to satellite outage, status will be displayed as "<i>Last Known: 'Status' (Date/Time)</i>".</p> <ul style="list-style-type: none"> • Idle - Machine not running. • Running - Machine started/running. • Offline - Machine status unknown- FasCard reader not communicating with system. • No Pricing - Indicates that vend prices have yet to be configured for this machine. This can be changed in the Pricing Features page. • Not Allowed - Indicates that the machine is not configured to start. This status can be changed in the Pricing Features page. • No Firmware - Indicates that the configured firmware version is unavailable. • Downloading Firmware to Satellite - Indicates that the download process has started and the satellite is downloading firmware from the server. • Downloading Firmware - Indicates that the satellite has successfully obtained firmware from server and card reader has begun downloading from satellite. • Machine Error Message- Serially connected machines utilizing the latest firmware may display any error that is reported by the machine firmware.
Last Start	The time this machine was last started.
Estimated Finish	This is the estimated end time of a current cycle.
Wifi Strength	<p>Two numeric values, first value represents the signal strength from the Satellite to the FasCard reader, second value represents the signal strength from the FasCard reader to the Satellite.</p> <ul style="list-style-type: none"> • Values closer to zero represents a 'Stronger' signal. Optimal signal strength should be between -10 & -70.
Sat Name	<p>The satellite for which the card reader is connected to.</p> <ul style="list-style-type: none"> • Locations with multiple satellites may see readers connected to any currently configured satellite.
Connect Time	<p>The date and time the FasCard reader last made an initial connection to the Satellite.</p> <ul style="list-style-type: none"> • The number in parenthesis is the number of time the FasCard reader has disconnected and reconnected since the satellite was restarted.
MAC Address	The MAC Address of the FasCard reader.
Firmware Ver	The current firmware version installed on the FasCard reader.
Hardware Ver	<p>This indicates the current CCI hardware type being utilized.</p> <ul style="list-style-type: none"> • F1- indicates a F1: FasCard Wireless Reader. • F2 - indicates a F2: FasCard Touchscreen Reader. • TK1 - indicates Version 1 of Fascard Touch Kiosk. • TK2 - indicates Version 2 of Fascard Touch Kiosk.

Machine Status for Addison Office

Mach #	Equipment Type	Status	Last Start	Estimated Finish	Wifi Strength	Sat Name	Connect Time	MAC Address	Firmware Ver	Hardware Ver
003 (#3)	Steve's Test Reader	Offline	N/A	N/A	N/A	N/A	N/A	N/A	N/A	N/A
060 (#60)	RMA - SelfTest II	Offline	N/A	N/A	N/A	N/A	N/A	N/A	N/A	N/A
100	Steve's Add Value Kiosk	Offline	N/A	N/A	N/A	N/A	N/A	N/A	N/A	N/A
Steve's Office (#111)	SingleVend NFC	Idle (9/18/2019 8:41:30 AM)	8/22/2019 3:10:18 PM	8/22/2019 3:10:37 PM	-89 / -76 dBm	LAB	9/18/2019 8:41:26 AM (4)	34:15:13:FE:5B:5A	1.23.45	F2
202	SingleVend NFC	Offline	N/A	N/A	N/A	N/A	N/A	N/A	N/A	N/A
203	SingleVend NFC	Offline	N/A	N/A	N/A	N/A	N/A	N/A	N/A	N/A
Lab Test (#500)	RMA - SelfTest II	Offline	N/A	N/A	N/A	N/A	N/A	N/A	N/A	N/A
Add Value (#504)	DEMO - Add Value Kiosk	Offline (9/5/2019 3:07:59 PM)	N/A	N/A	-40 / -41 dBm	LAB2	8/29/2019 9:38:09 AM (1)	34:15:13:FF:52:BE	1.01.06	F2
Conference Room - Meter Case (#505)	DEMO - SingleVend	Idle (9/17/2019 10:36:25 PM)	9/17/2019 10:34:41 PM	9/17/2019 10:36:21 PM	-67 / -56 dBm	LAB	9/17/2019 8:44:33 AM (4)	00:23:A7:1E:41:86	1.20.11	F1
510	RMA - SelfTest II	Offline	N/A	N/A	N/A	N/A	N/A	N/A	N/A	N/A
Lab - TK1 Demo (#554)	DEMO - Touch Kiosk v1	Diagnostic Mode Dispenser low (9/19/2019 10:02:44 AM)	N/A	2/22/2018 11:20:54 AM	-80 / -50 dBm	LAB	9/17/2019 7:47:01 AM (157)	A8:54:B2:19:C5:93	3.01.00	TK1
Lab - AVK Demo (#555)	DEMO - Add Value Kiosk	Offline	N/A	N/A	N/A	N/A	N/A	N/A	N/A	N/A
Conf Room - TK2 Demo (#556)	DEMO - Touch Kiosk v2	Idle (9/17/2019 5:39:25 PM)	N/A	N/A	-79 / -87 dBm	LAB	9/17/2019 10:33:52 PM (5)	D8:61:62:45:6A:32	3.01.00	TK2
801	Support - Alexis Cornelio	Idle (9/18/2019 9:48:28 AM)	9/18/2019 9:32:51 AM	9/18/2019 9:32:51 AM	-57 / 0 dBm	LAB	9/18/2019 9:48:26 AM (26)	50:F1:4A:60:B3:6F	1.23.45	F2

Machine Status History

Machine history logs the following information when a change is detected.



- Machine Status History may be accessed by clicking on any machine row on the main System Maintenance page.

Column Headers	Description
No	This indicates the record number of occurrence, with #1 being the most recent.
Status	This indicates the current or last known machine status.
Start Time	This indicates the time at which the current machine status began.
Elapsed Time	This indicates the amount of time the machine has been in the current state.
Sat Name	This indicates the satellite access point to which the card reader is connected.
Firmware Ver	This indicates the current firmware version on the card reader at the time the record was created.

[Settings](#)[Setup](#)[Users](#)[System](#)[Reports](#)[Loyalty](#)[Operations](#)

Machine Status History Details for machine 980

Time Zone: (UTC-06:00) Central Time (US & Canada) ▼

[Refresh](#)[Back](#)

Location: Addison Office (Central Standard Time)

Report display time: 2/28/2018 2:15:42 PM (CST)

Current online time period: 11:44:44

[Reboot Reader](#)[Show Debug Message](#)

No	Status	Start Time (CST)	Elapsed Time	Sat Name	Firmware Ver
1	Idle	2/28/2018 2:00:21 PM	00:15:20	Warehouse	1.19.16
2	Running	2/28/2018 1:53:19 PM	00:07:01	Warehouse	1.19.16
3	Idle	2/28/2018 2:30:58 AM	11:22:21	Warehouse	1.19.16
4	Offline	2/28/2018 2:30:58 AM	00:00:00		
5	Idle	2/28/2018 2:01:47 AM	00:29:10	Warehouse	1.19.16
6	Offline	2/28/2018 2:01:47 AM	00:00:00		
7	Idle	2/27/2018 4:49:52 PM	09:11:55	Warehouse	1.19.16
8	Offline	2/27/2018 4:44:26 PM	00:05:26		
9	Idle	2/27/2018 2:34:44 PM	02:09:42	Warehouse	1.19.16
10	Offline	2/27/2018 2:34:44 PM	00:00:00		
11	Idle	2/27/2018 11:36:50 AM	02:57:54	Warehouse	1.19.16
12	Running	2/27/2018 11:17:55 AM	00:18:54	Warehouse	1.19.16
13	Idle	2/27/2018 11:17:05 AM	00:00:50	Warehouse	1.19.16

Additional Information

[FasCard Admin Site - Configure Alerts](#)[FasCard Admin Site - Active Alerts](#)[FasCard Admin Site - Location Setup](#)[FasCard Loyalty Site - Machines](#)